


# ELASTIKOTE® RESTORATION PROTOCOL: EIFS

## ElastiKote 1000

## 10 Year Warranty

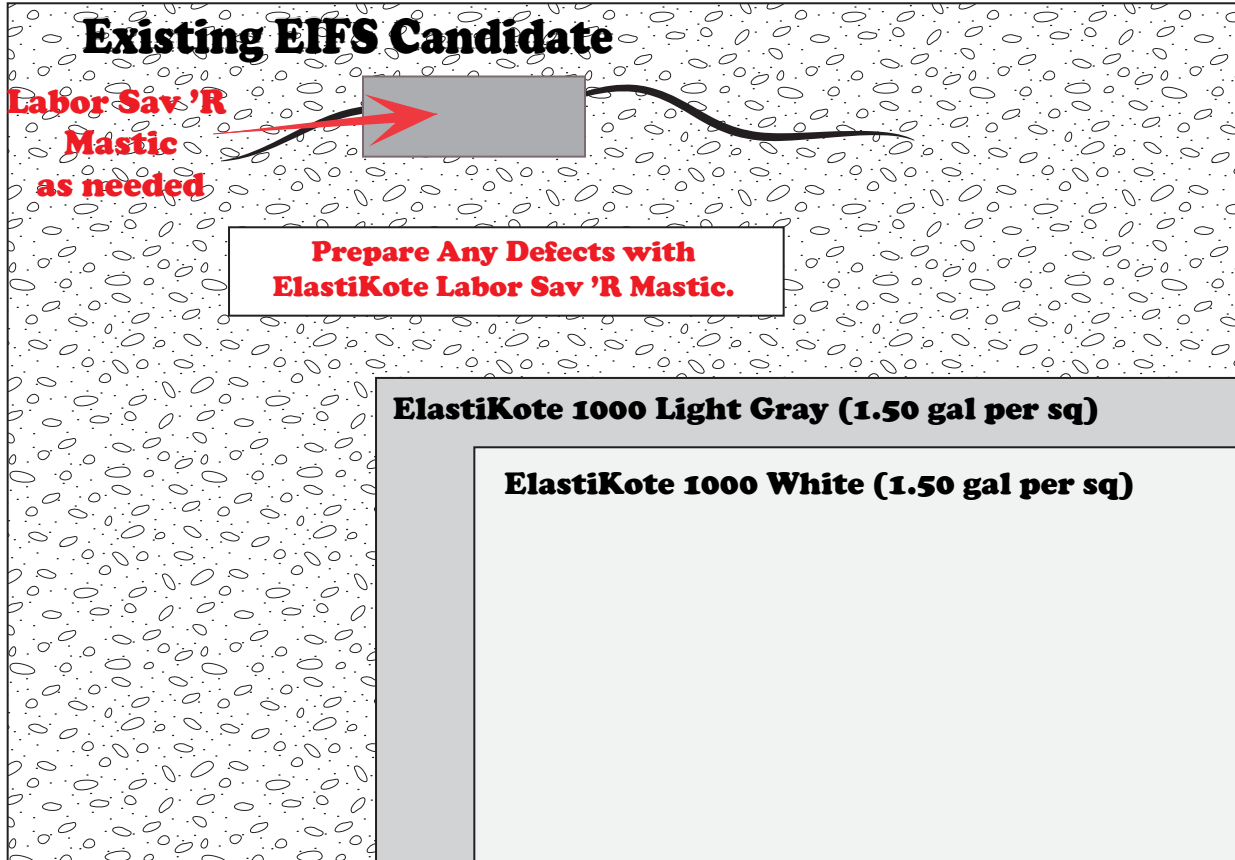

### Application

Complete Preparation Steps (below)

Apply 1 st coat of Elastikote 1000 (Light Gray) at 1.50 gal per sq

Apply final coat of Elastikote 1000 (White) at 1.50 gal per sq

**TOTAL COMPLETED MILS\_ 21 Dry Mills**

### Preparation

Clean areas as needed with Elastikote Substrate Cleaner and allow to soak for 30 minutes.

Rinse thoroughly with water and allow to dry

As needed, apply Elastikote Rust Inhibitive/EPDM Primer at a rate of 3 wet mils @250 sq ft/gal. over any break in the EIFS external coating or to entire area if EIFS coating is worn out.

Allow 4 to 6 hours to dry

Repair ANY Suspicious Cracks, Improperly Protected Penetrations or Surface Defects with Elastikote Labor Sav'R Mastic