


ELASTIKOTE® RESTORATION PROTOCOL: KYNAR

ElastiKote 1000

10 Year Warranty

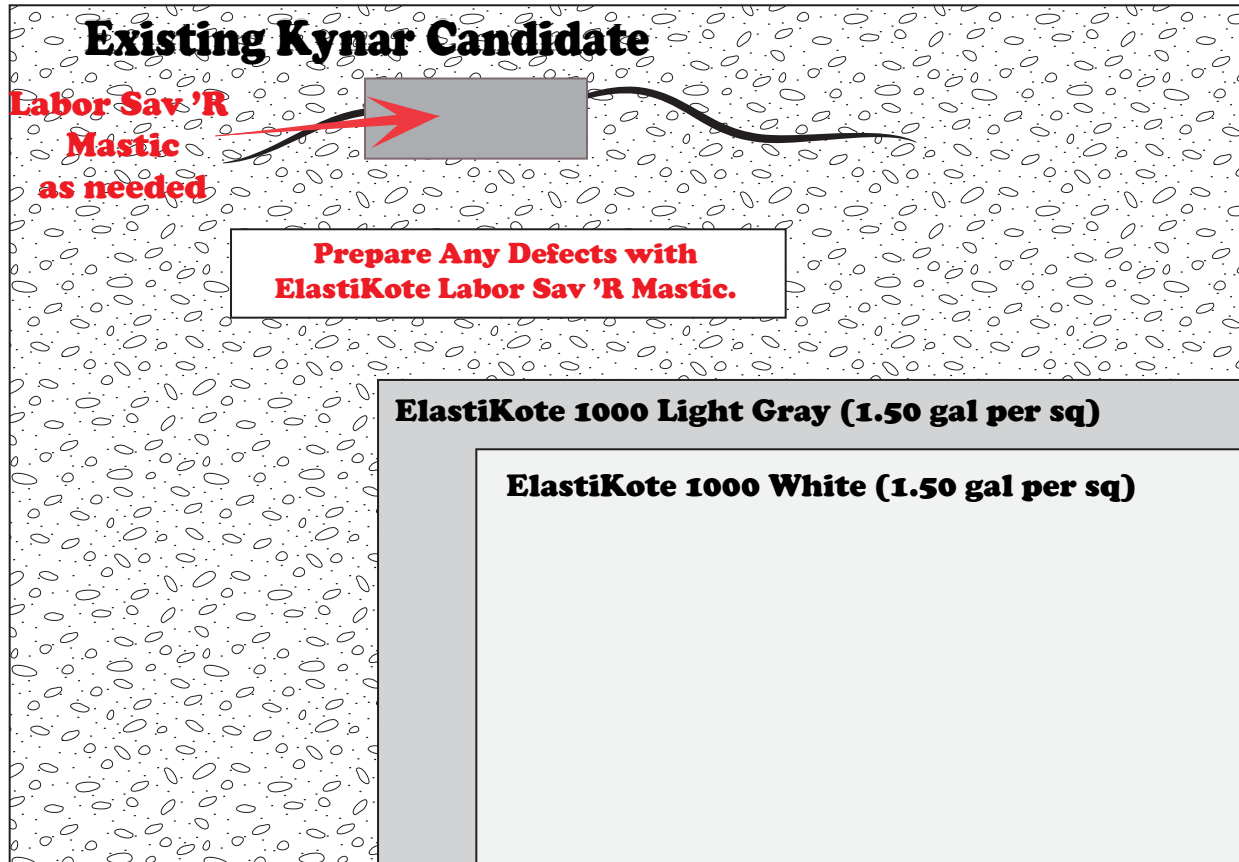

Application

Complete Preparation Steps (below)

Apply 1 st coat of Elastikote 1000 (Light Gray) at 1.50 gal per sq

Apply final coat of Elastikote 1000 (White) at 1.50 gal per sq

TOTAL COMPLETED MILS_ 21 Dry Mills

Preparation

Clean areas as needed with Elastikote Substrate Cleaner and allow to soak for 30 minutes

Rinse thoroughly with water and allow to dry

Apply Elastikote Rust Inhibitive/EPDM Primer at a rate of 3 wet mils @250 sq ft/gal. on rusty/corroded areas as needed

Allow 4 to 6 hours to dry

Repair ANY Suspicious Cracks, Improperly Protected Penetrations or Surface Defects with Elastikote Labor Sav 'R Mastic