


# ELASTIKOTE® RESTORATION PROTOCOL: MODIFIED BITUMEN

## ElastiKote 5000

## 10 Year 2 Coat

### Existing Modified Bitumen Candidate

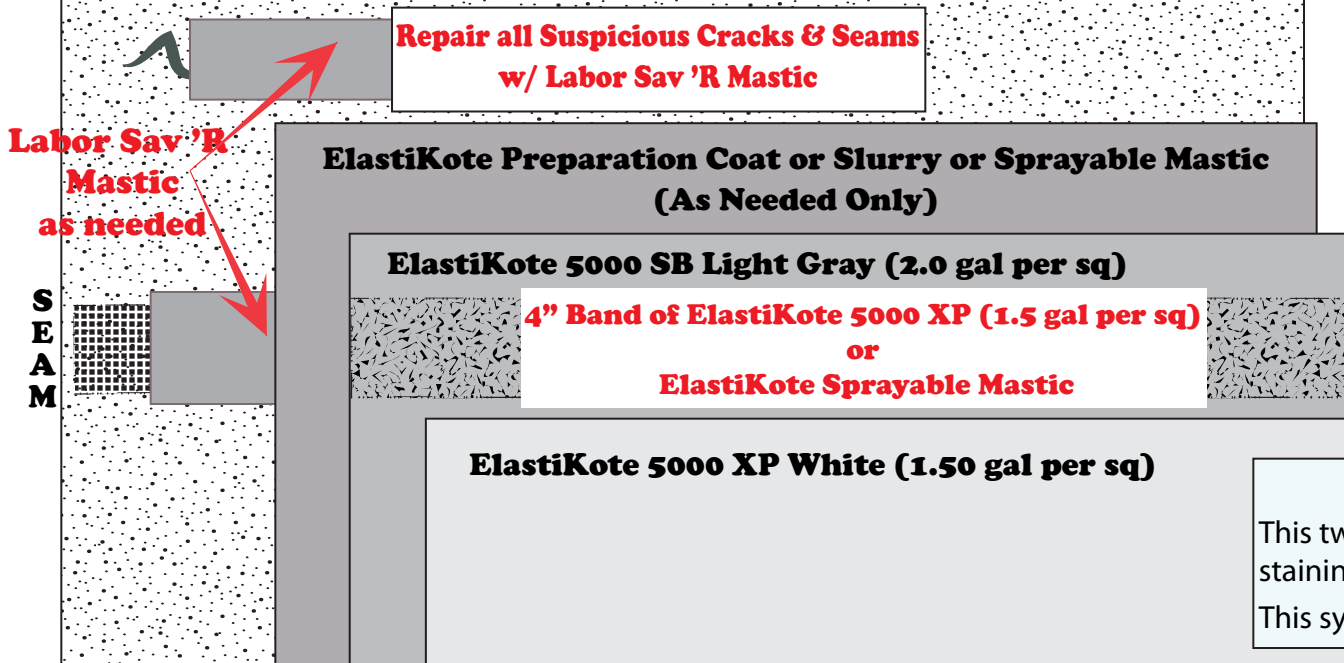

### Preparation

Mechanically remove all loose dirt, etc. by vacuum or mechanical broom.

DO NOT incorporate high-pressure water into existing roof assembly

Clean areas as needed with ElastiKote Substrate Cleaner

Surface must be dry, clean, and free from dirt, loose rust and foreign substances

### Notice

This two-coat system is not warrantied against staining/bleed through.

This system will not provide a smooth surface.

### Application

Complete Preparation Steps (above)

Apply ElastiKote Preparation Coat or "Slurry" (as needed only)

Allow to dry at least 48 hours before applying additional applications

Inspect all surface areas for suspicious and vulnerable seams and defects to be reinforced with ElastiKote 5000 Labor Sav 'R Mastic at a minimum of 3/16" wet thickness

Apply Labor Sav 'R Mastic or reinforced SEBS Mastic to penetrations and expansion joints as well as flashings, transitions and curbs with angles 90 degrees or greater. Anything less than 90 degrees can be reinforced with Labor Sav 'R, non-reinforced SEBS Mastic or Sprayable Mastic.

Apply 1st coat of ElastiKote 5000 SB (Light Gray) at 2.0 gal per sq

Apply a 4" band of ElastiKote 5000 XP as a reinforcement to all seams at 1.5 gal per sq or use ElastiKote 5000 Sprayable Mastic in a 4" wide band (Approx 80 linear ft/gal @ 42 wet mils, 21 dry mils)

Apply final wear coat of ElastiKote 5000 XP (White) at 1.5 gal per sq

**TOTAL COMPLETED MILS\_23 Dry Mils**