


# ELASTIKOTE® RESTORATION PROTOCOL: SPF

## ElastiKote 5000

## 10 Year Warranty

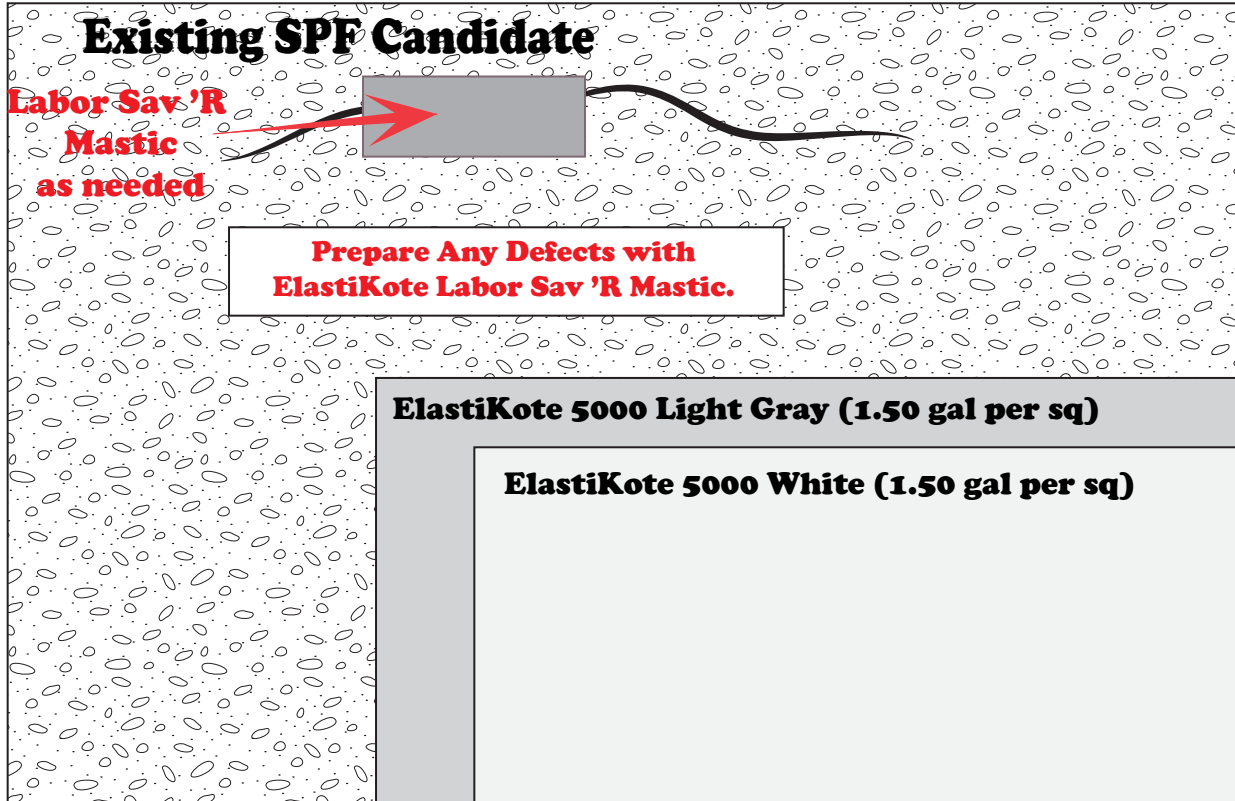

### Application

Complete Preparation Steps (below)

Apply 1st coat of Elastikote 5000 (Light Gray) at 1.5 gal per sq

Apply final wear coat of Elastikote 5000 (White) at 1.5 gal per sq

**TOTAL COMPLETED MILS\_ 21 Dry Mills**

### Preparation

INSTALLATION MUST BE COMPLETED **WITHIN** 48 HOURS AFTER SPF INSTALLATION TO ENSURE PROPER PROTECTION.

Clean areas thoroughly with Elastikote Substrate Cleaner and allow to soak for 30 minutes.

Rise thoroughly with water and allow to dry.

Verify moisture level is 5% or lower with moisture meter before coating. Do not continue until moisture level is below 5%.

Repair ANY Surface Defects with Elastikote Labor Sav'R Mastic.

All penetrations, etc. must be inspected, prepared & sealed. For penetrations that are more than 3/16" wide or less, it is acceptable to properly seal such physical details using Elastikote Labor Sav'R Mastic applied at a minimum thickness of 3/16" and a minimum width of 4" wide.